

25 Year Preventative Maintenance Recommendations

Term	Recommended Maintenance	Expected Part Replacement/Scope
2 year parts and labor (new unit warranty)	Per maintenance manual	None
Every 2 years	Preventative Maintenance	Lubrication of elevation head and shaft (6 fittings), overall unit inspection
5 year life	Scheduled Maintenance	Replace emergency back-up batteries (qty. 2) & display watch battery, inspect unit
10 year life	Scheduled Maintenance	Replace sensors (qty. 6), emergency batteries (qty. 2) & display watch battery, and inspect unit
15 year life	Scheduled Maintenance	Replace inverter as required, replace emergency batteries (qty. 6) & display watch, inspect unit
20 year life	Scheduled Maintenance	Replace sensors (qty. 4), power supply, emergency batteries (qty. 2) & display watch battery, inspect unit
25 year life	Scheduled Maintenance	Replace motors (as required), replace emergency batteries & display watch battery, inspect unit